Install the top bridge and washer.
Loosely install the stem nut.
Insert the fork legs (page 14-20).

Tighten the stem nut to the specified torque.

**TORQUE:** 98 N·m (10.0 kgf·m , 72 lbf·ft)

Recheck the steering stem adjustment by turning bridge lock-to-lock and checking for smoothness. There should be no binding.

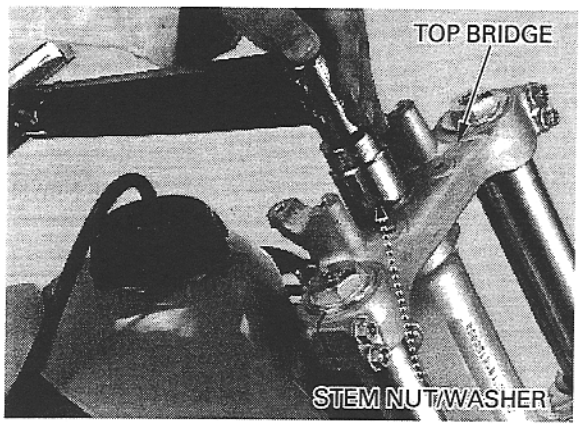


Install the following:
- Handlebar (page 14-23)
- Speedometer (page 17-13)
- Front visor (page 2-3)
- Front brake caliper (page 16-15)
- Front fender (page 2-3)
- Front wheel (page 14-8)