Remove the driven sprocket bolts, nuts and washers.
Remove the driven sprocket.
Remove the left dust seal.

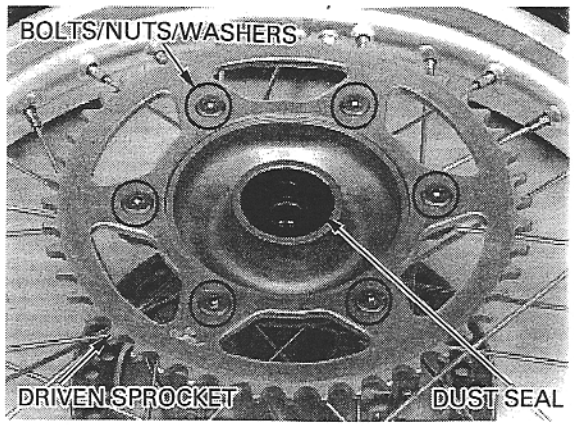

Remove the wheel bearings and distance collar.

TOOLS:

Bearing remover head, 20 mm	07746-0050600
Bearing remover shaft	07746-0050100

CAUTION:

- ***Never install the old bearings; once the bearings have been removed, the bearing must be replaced with a new once.***
- ***Replace the bearings in pairs.***

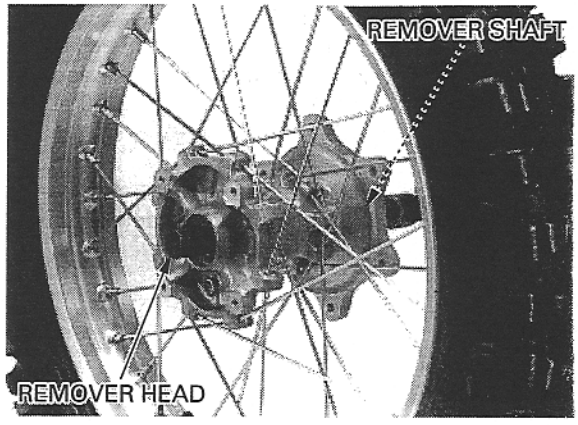

ASSEMBLY

