Install the shock absorber lower mounting bolt aligning the cut out of the bolt with the stopper on the shock absorber.

Tighten the nut to the specified torque.

TORQUE: 44 N·m (4.5 kgf·m , 33 lbf·ft)

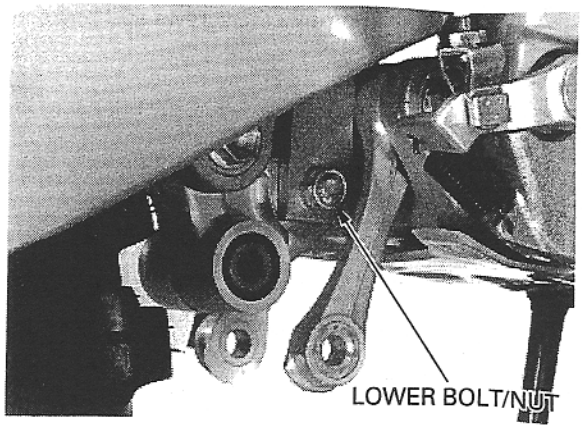

Install the shock arm bolt (shock link side) and tighten the nut to the specified torque.

TORQUE: 69 N·m (7.0 kgf·m , 51 lbf·ft)

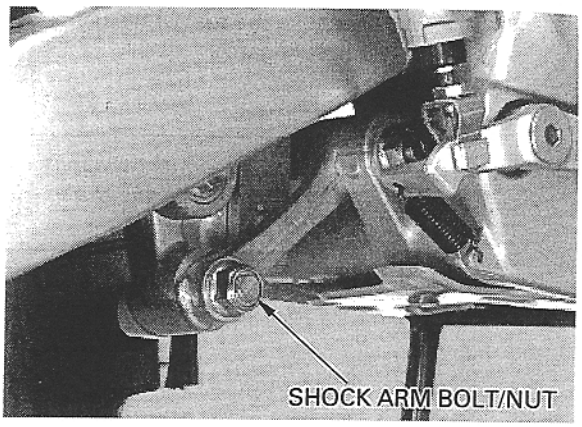

Install the side stand and bolts.
Tighten the bolts to the specified torque.

TORQUE:
8 mm socket bolt: 26 N·m (2.7 kgf·m , 20 lbf·ft)
10 mm socket bolt:39 N·m (4.0 kgf·m , 29 lbf·ft)

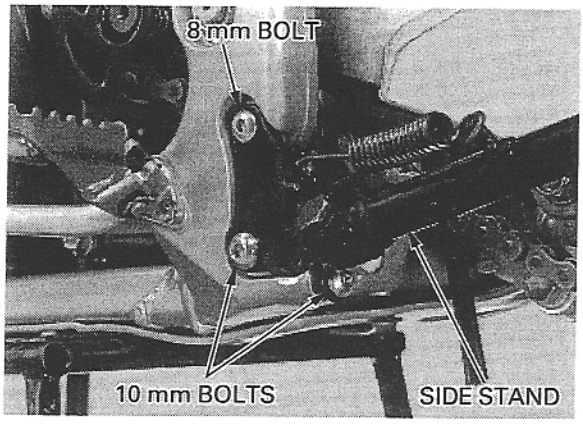

SWINGARM

REMOVAL

Raise the rear wheel off the ground by placing a work stand under the engine.

Remove the rear wheel (page 15-4).

Remove the shock arm bolts and nuts (swingarm side, shock link side).

