HANDLEBAR SWITCHES


NOTE:

The handlebar switches (lighting, dimmer and engine stop) must be replaced as an assembly.


Remove the front visor (page 2-3).

Disconnect the front visor connector.
Check for continuity between the wire terminals of the handlebar switch connector.
Continuity should exist between the color coded wire terminals as follows:


ED type:

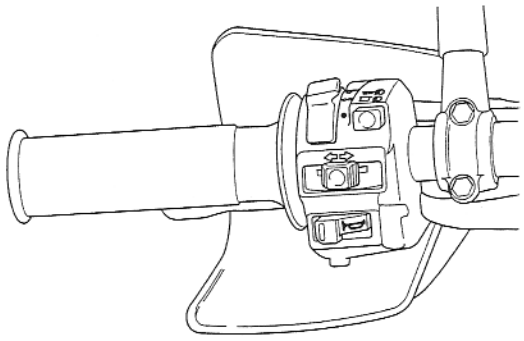

DK type:

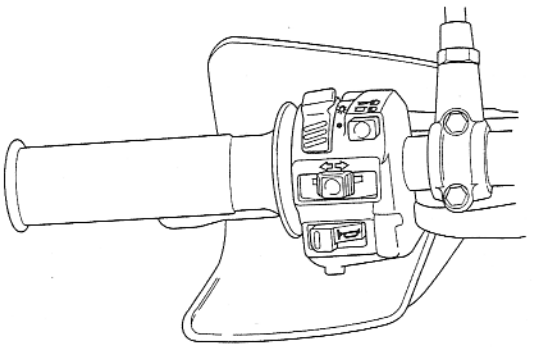

U type:

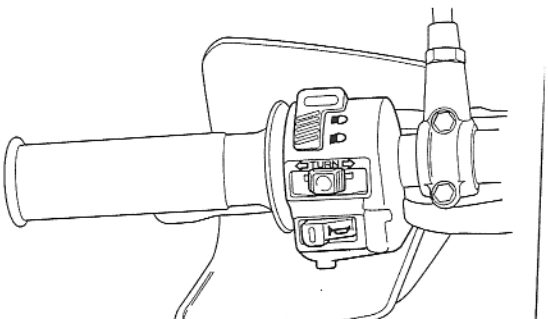

HORN SWITCH

	Lg	Bl
FREE		
PUSH	○—○	

ENGINE STOP SWITCH

	Bl/W	G
OFF	○—○	
RUN		

LIGHTING/DIMMER SWITCH

ED type:

	—	W/Y	Bl	Br
•				
P			○—○	
H	○—○		○—○	

	Bu	—	W
HI	○—○		
(N)	○—○	○—○	
LO		○—○	

DK type:

	—	W/Y	Br
•			
H	○—○	○—○	

	Bu	—	W
HI	○—○		
(N)	○—○	○—○	
LO		○—○	

DK type:

	Bu	Br	W
HI	○—○		
(N)	○—○	○—○	
LO		○—○	

TURN SIGNAL SWITCH

DK, U type:

	O	Gr	Lb	O/W	Gr/W	Lb/W
L	○—○			○—○		
(N)						
R		○—○			○—○	

Bl	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY