TURN SIGNAL RELAY

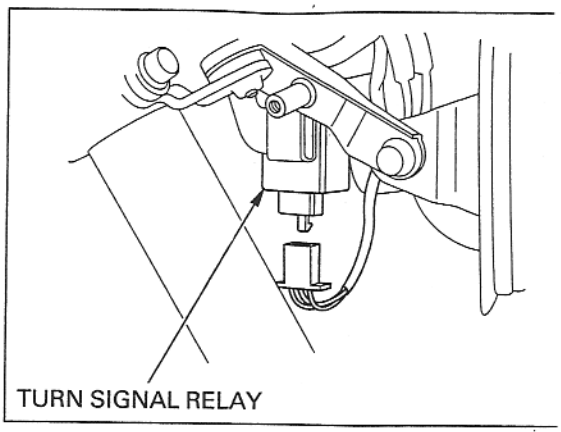
TURN SIGNAL RELAY

PERFORMANCE TEST

Remove the front visor (page 2-2).

Disconnect the turn signal connector.

1. Short the black and gray terminals of the turn signal relay connector with a jumper wire. Start the engine and check the turn signal light by turning the switch ON.

Light comes on

Light does not come on

- Broken wire harness

2. Check for continuity between the green terminal of the relay connector and ground.

Continuity

No continuity

- Broken ground wire

- Faulty turn signal relay.
- Poor connection of the connector.