


Remove the left handlebar switch housing.



Remove the screw from the left grip end.



Remove the caps, bolts and handlebar upper holders.  
Remove the handlebar.

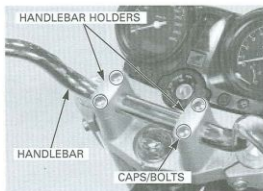

## INSTALLATION

Install the handlebar and upper holders with their punch marks facing forward.

Temporarily tighten the upper holder socket bolts.

Loosen the upper holder socket bolts and align the punch marks on the handlebar with the slits of the handlebar holders.

Tighten the forward bolts first, then tighten the rear bolts.

**TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)**

