


HYDRAULIC BRAKE

INSTALLATION

Make sure that the pad retainer is installed on the caliper bracket properly.
Apply silicone grease to the caliper pin and install the caliper onto the bracket.


Install the rear brake pads and tighten the caliper mounting bolt and pad pin (page 16-13).

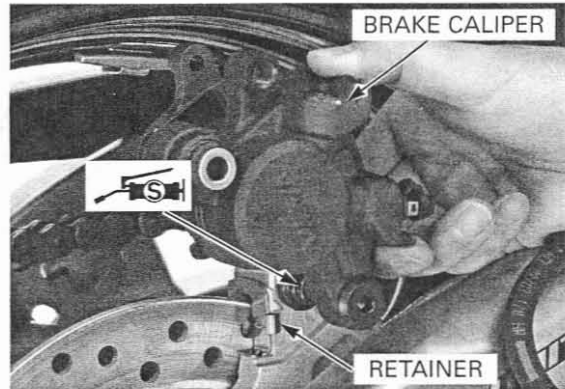

Install the brake hose eyelet joint to the caliper body with new sealing washers and oil bolt.
Push the brake hose eyelet joint to the stopper on the caliper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Fill brake fluid and bleed air from the rear brake hydraulic system (page 16-8).

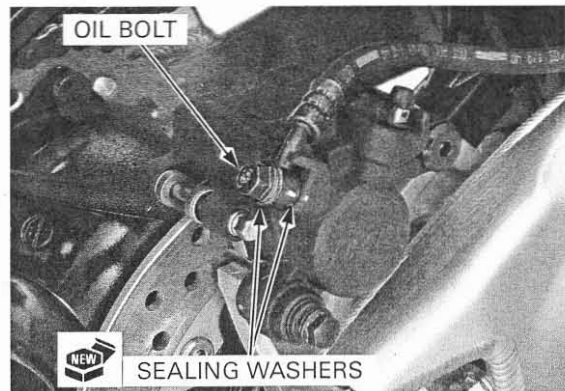


BRAKE PEDAL

REMOVAL

Remove the right middle cowl (page 3-7).

Disconnect the rear brake light switch 2P connector and release the light switch wire from the clamps.

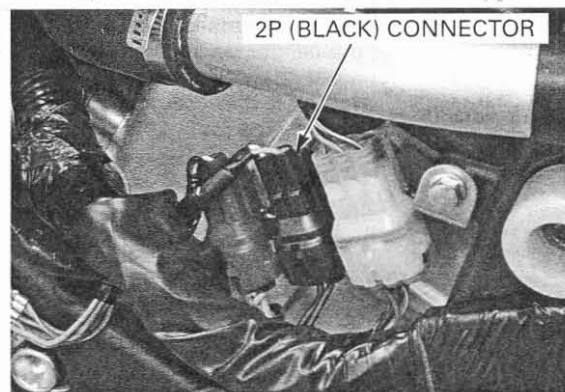

Remove the exhaust pipe protector (page 16-21).

Remove the right footpeg bracket socket bolts and bracket assembly from the frame.

