


If necessary, add recommended coolant.

RECOMMENDED ANTIFREEZE:

Pro Honda Coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines.

Remove the reserve tank filler cap and fill to the "UPPER" level line with a 50/50 mixture of distilled water and antifreeze.
Reinstall the filler cap.

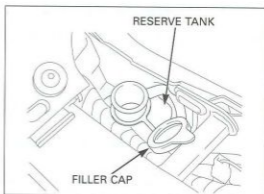


COOLING SYSTEM

Remove the lower cowl and inner half cowl (page 2-4).

Check the radiator air passages for clogging or damage.

Straighten bent fins, and remove insects, mud or other obstructions with compressed air or low water pressure.

Replace the radiator if the air flow is restricted over more than 20% of the radiating surface.

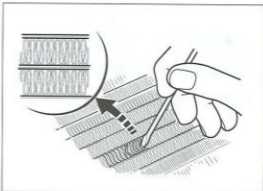

Inspect the radiator hoses for cracks or deterioration, and replace if necessary.

Check the tightness of all hose clamps and fasteners.

