




STARTER SWITCH

Disconnect the black coupler.

(1) SWITCH POSITION	(2) WIRE COLOR	(3) BLACK	(4) BLUE/BLACK	(5) YELLOW RED
		○	—	○
		○	—	○

There should be continuity as indicated by O—O in the table.

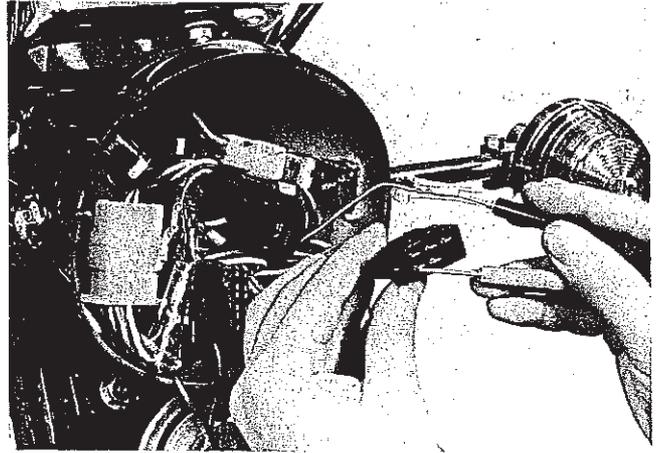

ENGINE STOP SWITCH

(Canadian Type)

Disconnect the engine stop switch coupler (black coupler).

(1) SWITCH POSITION	(2) WIRE COLOR	(3) BLACK	(4) BLACK/WHITE
	OFF RUN OFF		
	OFF RUN OFF	○	○

There should be continuity as indicated by O—O in the table.

