


Rear Brake Caliper Removal/Installation

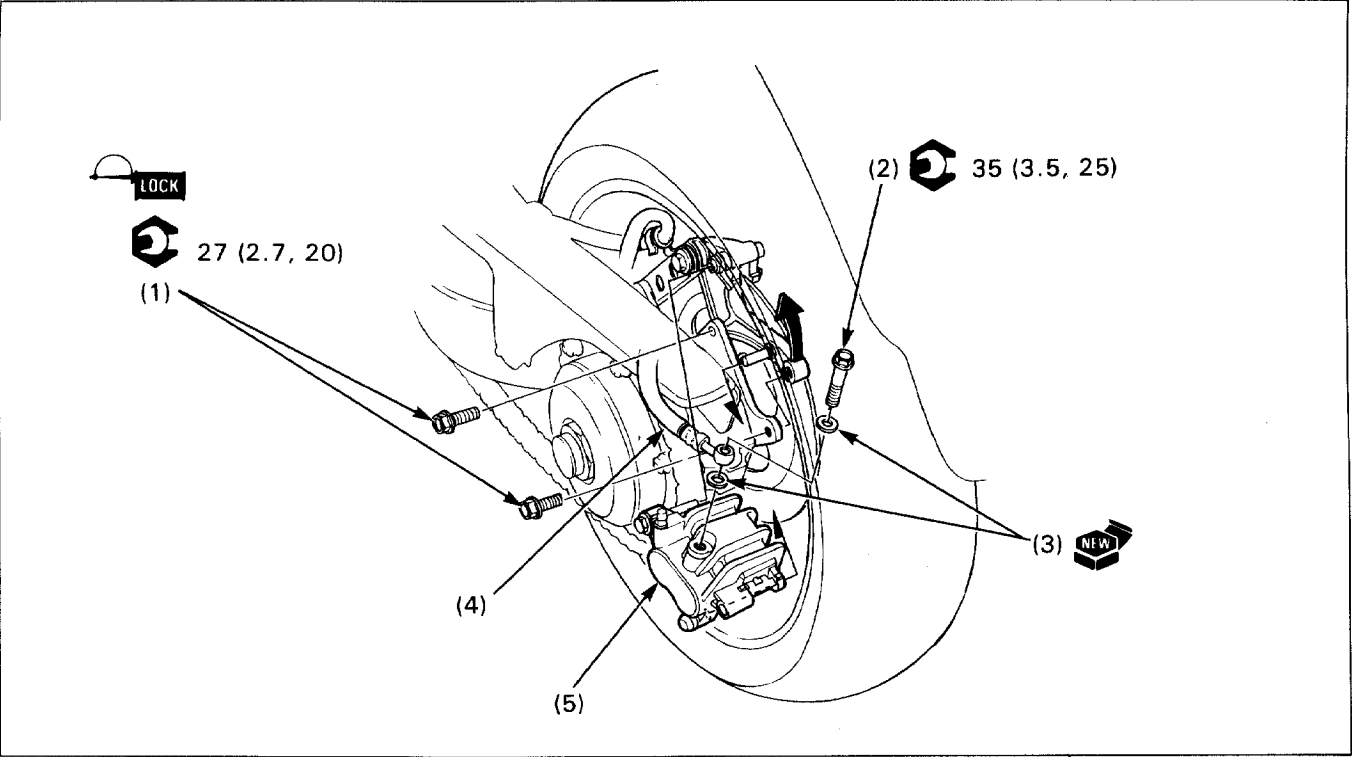

WARNING

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Inhaled asbestos fibers have been found to cause respiratory disease and cancer. Never use an air hose or dry brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner or alternate method approved by OSHA designed to minimize the hazard caused by airborne asbestos fibers.

NOTE

- Before disconnecting the brake hose (1), place a pan under the caliper to catch the draining fluid and squeeze the brake pedal slowly to push out the piston.

Requisite Service

- Brake pad removal/installation (page 14-3)
- Brake fluid replacement/air bleeding (section 17 of the Common Service Manual)

Procedure		Q'ty	Remarks
Removal Order			• Installation is in the reverse order of removal. - When installing, apply a locking agent to the threads. - At installation, press the hose end against the stopper while tightening the hose bolt.
(1)	Caliper bracket bolt	2	
(2)	Brake hose bolt	1	
(3)	Sealing washer	2	
(4)	Brake hose	1	
(5)	Rear brake caliper assembly	1	