


REAR WHEEL/SUSPENSION

Install the brake disc onto the right wheel hub.
Install new disc bolts and tighten them in a criss-cross pattern in 2 or 3 steps.


TORQUE: 42 N·m (4.3 kgf·m , 31 lbf·ft)

Apply grease to a new dust seal lip and install it into the right wheel hub.

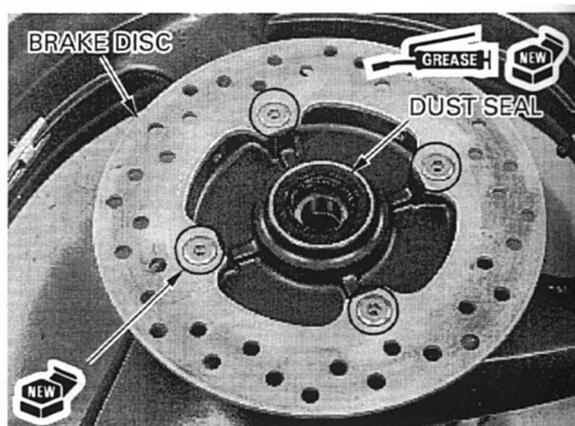


INSTALLATION

Install the side collars.

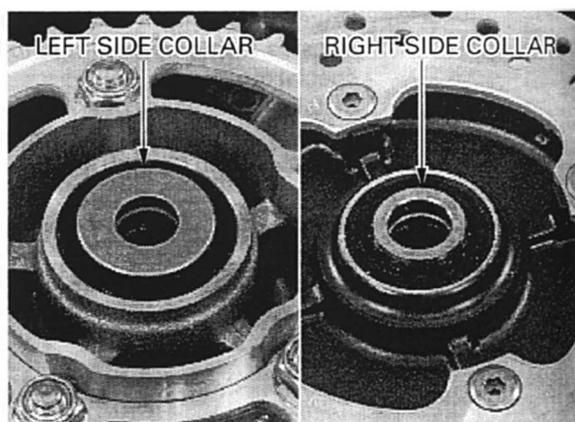

Make sure that the rear brake caliper is in position.
Place the rear wheel in the swingarm and install the drive chain over the driven sprocket.
Insert the rear axle through the swingarm, wheel and caliper bracket.
Install the washer and axle nut.

Adjust the drive chain slack (page 3-14).

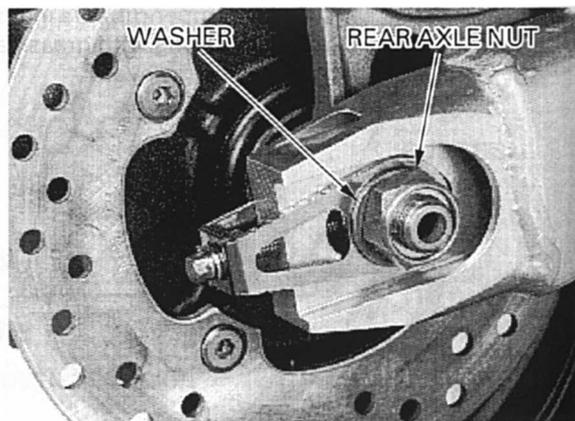

SHOCK ABSORBER

REMOVAL

Support the motorcycle securely with a hoist or equivalent.

Remove the exhaust pipe (page 2-5).

Remove the shock arm-to-shock link nut and bolt.
Remove the shock absorber lower mounting nut and bolt.

