



## REAR WHEEL/SUSPENSION

Never assemble valves which may have become dusty or otherwise contaminated during the disassembly process. Disassemble them, thoroughly clean them with solvent and blow them dry with compressed air before assembly.

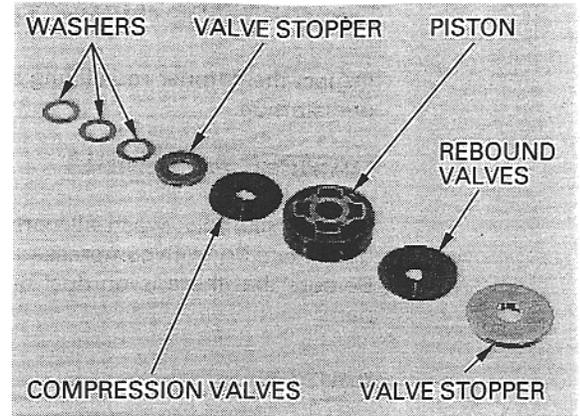

Install the rubber seat, rubber stopper and end plate.

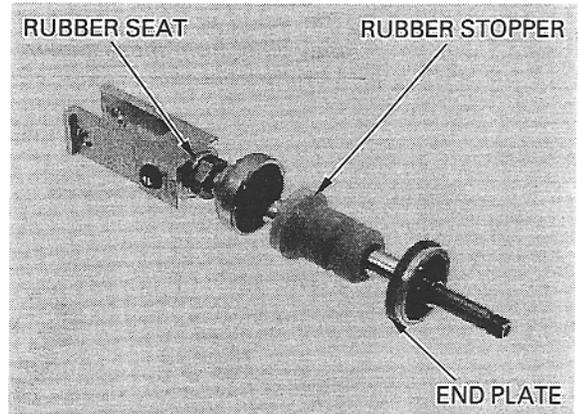


Install the special tool onto the damper rod.

**TOOL:**  
Slider guide, 16 mm      07PMG-KZ40100

Carefully install the rod guide case with the rebound rubber facing up, over the damper rod.

**NOTE:**

- The rod guide case oil seal is filled with grease.
- Be careful not to remove grease from the seal.
- Be careful not to damage the dust seal lip or turn it inside out.

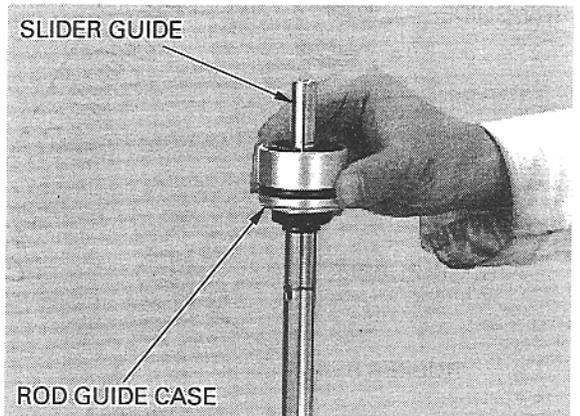

Remove the special tool.

Install the valve stopper and compression valves onto the damper rod.

