


Install the caliper guard plate and tighten the bolts securely.


Install the rear wheel (page 15-8).
Install the brake pad (page 16-6).
Fill the rear brake reservoir to the upper level and bleed the brake system (page 16-3).

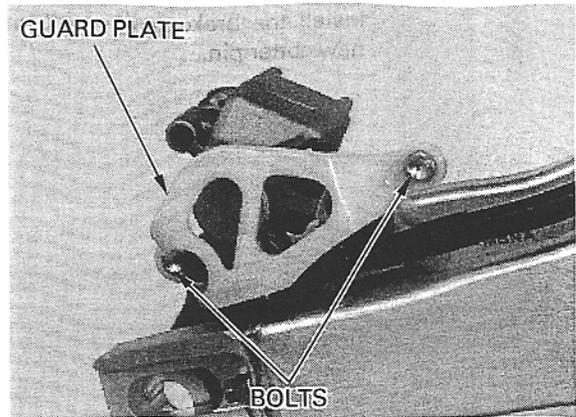

BRAKE PEDAL


REMOVAL

Remove the rear brake pedal pivot bolt and return spring.

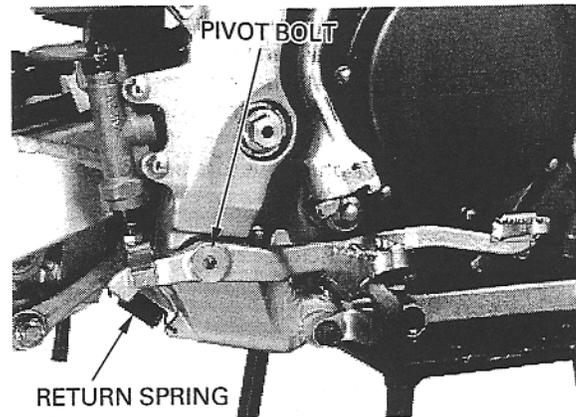

Remove and discard the cotter pin.
Remove the joint pin.

Remove the brake pedal.

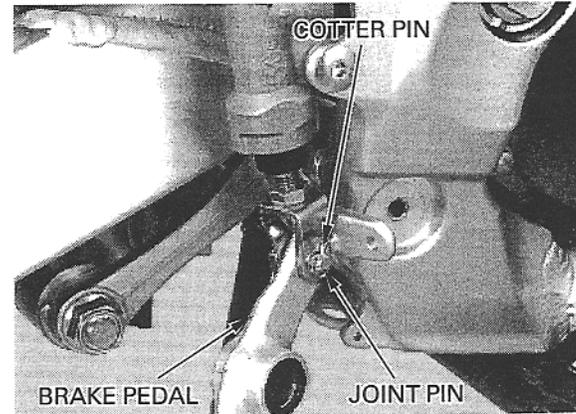

INSTALLATION

Check the dust seal and replace if necessary.

